




# DC840 + G893 (G892)

## Drilling Instructions




ASSA ABLOY

9313805

### Metal Doors: frame installation

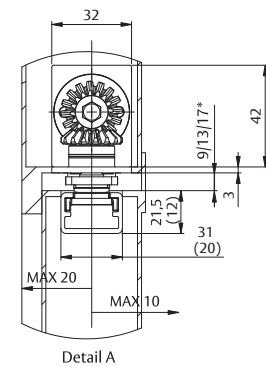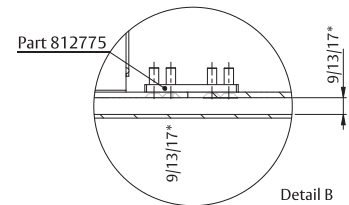
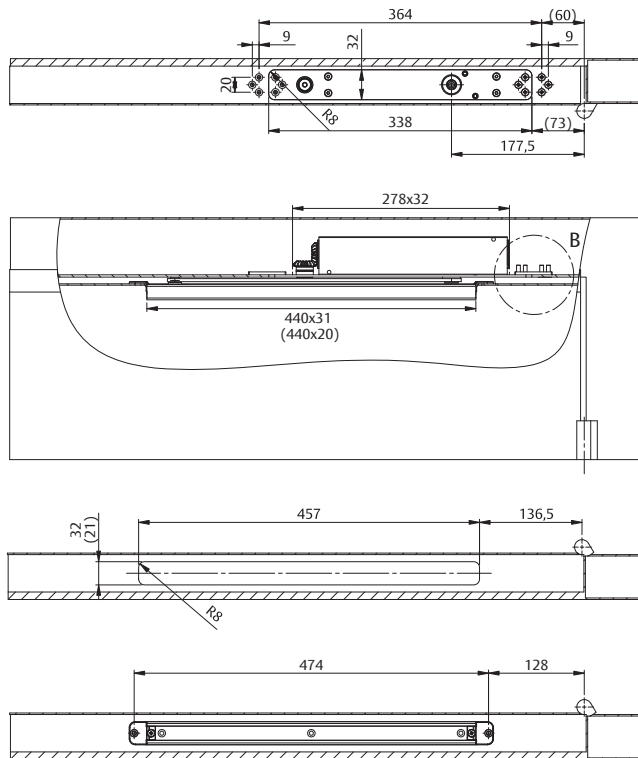


### Metal Doors: door installation

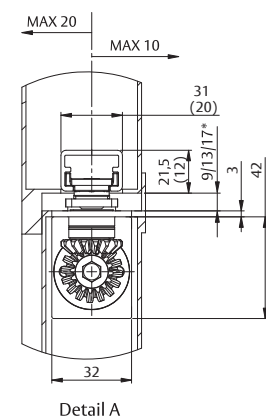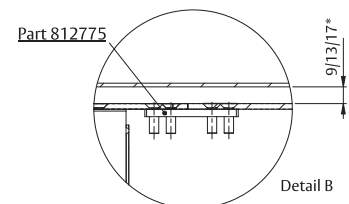
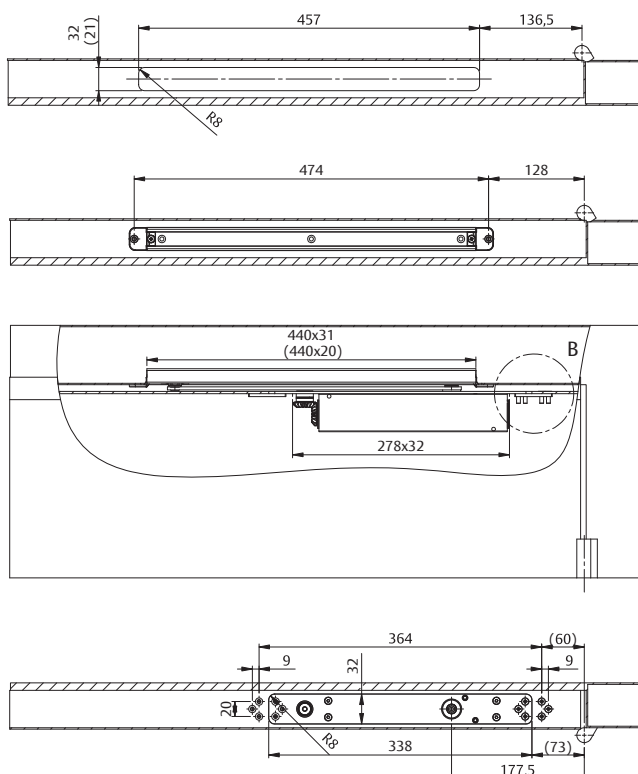


/\*  
 9 mm = with standard concealed door closer  
 13 mm = version with 4 mm spindle extension  
 17 mm = version with 8 mm spindle extension

## Timber Doors: frame installation

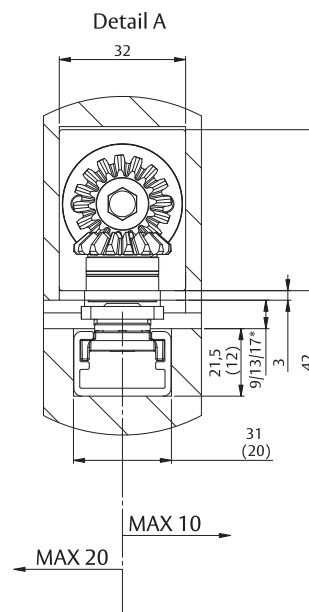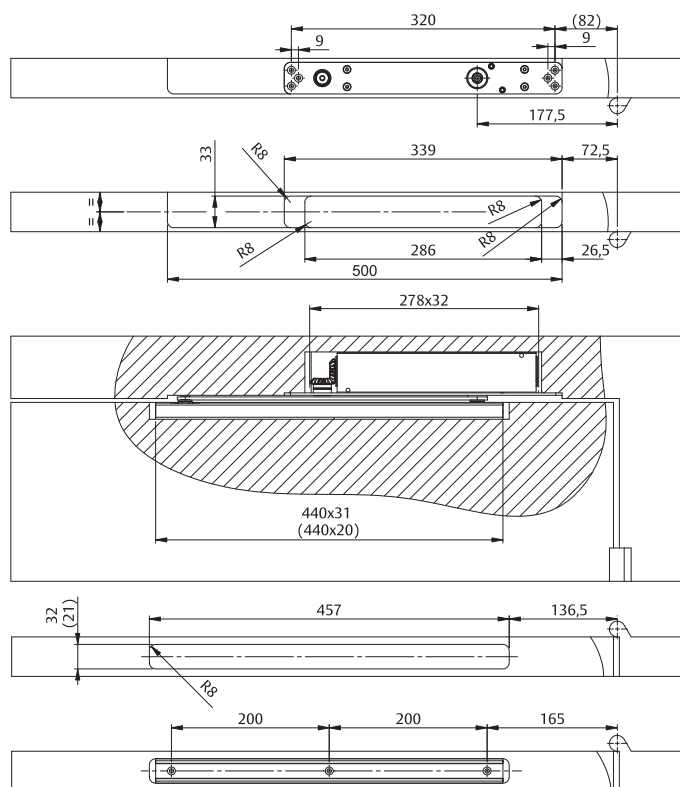

## Timber Doors: door installation

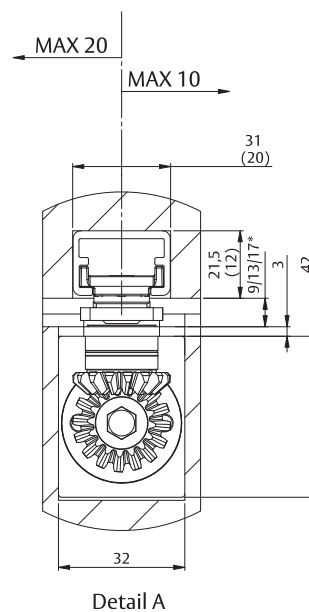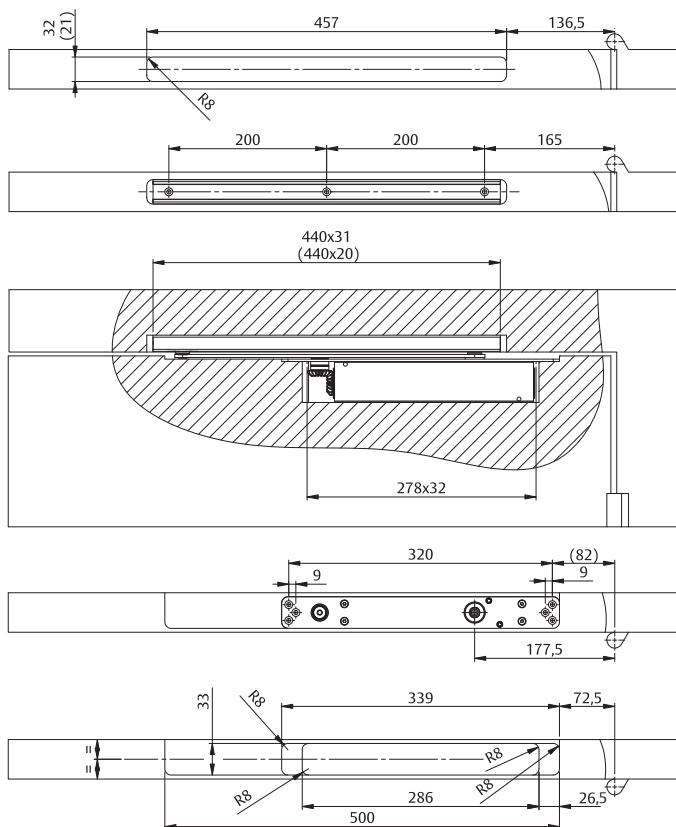

/\*  
 9 mm = with standard concealed door closer  
 13 mm = version with 4 mm spindle extension  
 17 mm = version with 8 mm spindle extension